

## Unico 1100/1201/1230 Drive Navigation for 16 Key Display



### Basic Keypad Key Functions

| Key        | Name            | Description   |
|------------|-----------------|---|
| [Fn]       | Function Key.   | Selects the alternate function of other keys  |
| [0] - [9]  | Number Keys     | Used to enter a value or select an item   |
| [./]       | Minus/Point Key | Used to enter a decimal point when pressed alone.<br>Enters a minus sign when pressed with the [Fn] key.  |
| [↑/↓]      | Up/Down Key     | Moves down a list when pressed alone.<br>Moves up a list when pressed with the [Fn] key.  |
| [Quit]     | Quit Key        | Aborts a revised parameter entry, aborts a test procedure or navigates up through the menus. .  |
| [Del]      | Delete Key      | Backspaces and/or deletes a number or character when entering parameter values.   |
| [Ent]      | Enter Key       | Enters a revised parameter value or navigates down through the menus.   |
| [Fn] + [0] | Clear           | Issues a fault reset request to the controller on the Active Fault Display.<br>Clears various display items in the Help Menu<br>Clears one entry in the F/W or Event History Menus<br>Forces off all fault masks in the Fault Mask Display. |
| [Fn] + [1] | Set             | Clears all entries in the F/W or Event History Menus<br>Forces on all fault masks in the Fault Mask Display.  |

# Unico 1100 Drive Navigation for 16 Key Display

## Example Drive Display

The example display here is of a Unico Sucker Rod Pump drive used in the Oil and Gas Sector. The options under each menu will vary with applications, but navigation will be similar to this.

